

DAILY REFERENCE GUIDE



THANK YOU FOR PURCHASING A BAUKNECHT PRODUCT

To receive more comprehensive help and support, please register your product at www.bauknecht.eu/register

 


You can download the Safety Instructions and the Use and Care Guide by visiting our website docs.bauknecht.eu and following the instructions on the back of this booklet.




Before using the appliance carefully read the Health and Safety guide.

PRODUCT DESCRIPTION

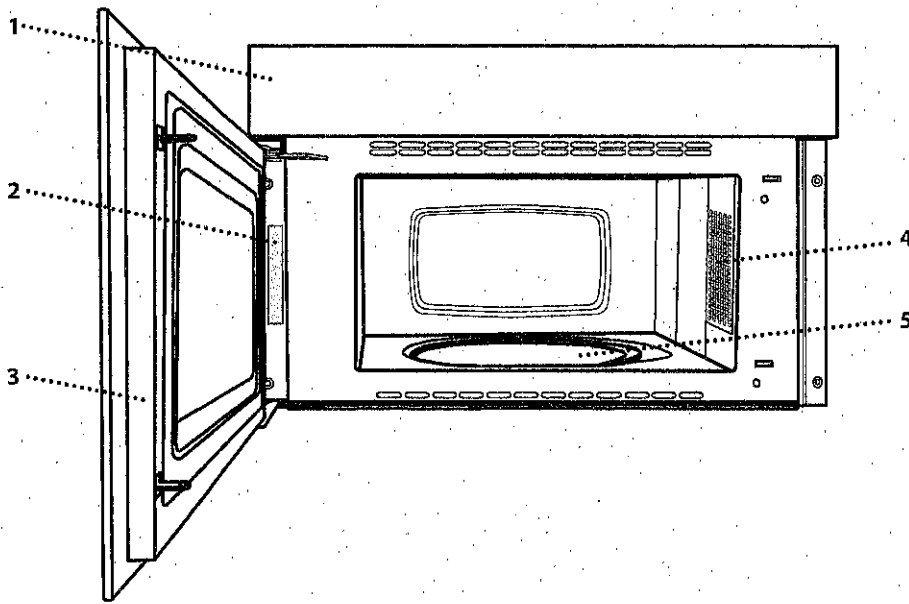

1. Control panel
2. Identification plate (do not remove)
3. Door
4. Light
5. Turntable

 CONTROL PANEL

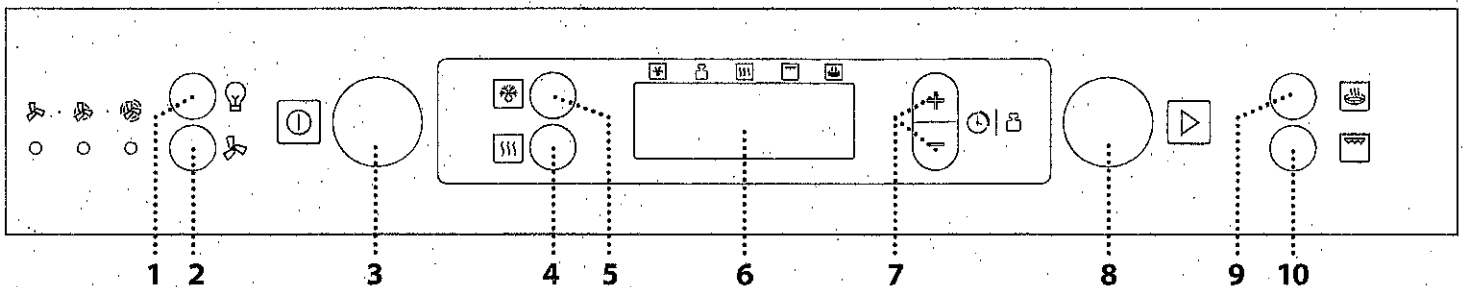

1. LIGHT

Press to turn on/off the hood light.

2. FAN

Regulates the fan speed by pressing the button repeatedly.

3. STOP

For stopping a function or an audible signal, cancelling the settings and switching off the oven.

4. MICROWAVE FUNCTION/POWER

For selecting the microwave function and setting the required power level.

5. DEFROST FUNCTION

6. DISPLAY

7. +/- BUTTONS

For adjusting the settings of a function (e.g. length, weight).

8. START

 
For starting a function. When the oven is switched off, it activates the Jet Start microwave function.

9. CRISP FUNCTION

10. GRILL FUNCTION


ACCESSORIES

TURNTABLE




Placed on its support, the glass turntable can be used with all cooking methods. The turntable must always be used as a base for other containers or accessories.

 TURNTABLE SUPPORT

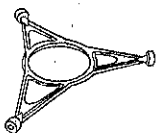

Only use the support for the glass turntable. Do not rest other accessories on the support.

 GREASE FILTER



For removing fumes, smoke, odors, and steam from the air by evacuation and filtration.

The number and the type of accessories may vary depending on which model is purchased.

 
CRISP PLATE



Only for use with the specific Crisp function. The crisp plate must always be placed in the centre of the glass turntable and can be preheated when empty, using the


special function for this purpose only. Place the food directly on the crisp plate.

HANDLE FOR THE CRISP PLATE



Useful for removing the hot crisp plate from the oven.

 INNER FILTER



It's located inside the grease filter, and it's removable for cleaning.

Other accessories that are not supplied can be purchased separately from the After-sales Service.

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use and resistant to oven temperatures.

Metallic containers for food or drink should never be used during microwave cooking.

Always ensure that foods and accessories do not come into contact with the inside walls of the oven.

Always ensure that the turntable is able to turn freely before starting the oven. Take care not to unseat the turntable whilst inserting or removing other accessories.

HOOD FUNCTIONS



HOOD FAN

The fan function is turned on/off or regulates the fan speed by pressing the Fan button repeatedly. The Fan always starts with the speed set to minimum. Repeated pressing increases the fan speed. When max fan speed is reached the next press turns the fan off.



LOW, MEDIUM AND HIGH SPEED



HOOD LIGHT

The light function on the hood is turned on and off by pressing the light button.

FUNCTIONS



MICROWAVE

For quickly cooking and reheating food or drinks.

POWER (W)	RECOMMENDED FOR
750 W	Quickly reheating drinks or other foods with a high water content or meat and vegetables.
500 W	Cooking fish, meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes.
350 W	Slow, gently cooking. Perfect for melting butter or chocolate.
160 W	Defrosting frozen food or softening butter and cheese.
0 W	When using the minuteminder only.



DEFROST

For quickly defrosting food such as meat, poultry and fish weighing between 100 g and 2 kg. Food should be placed directly onto the glass turntable. Turn the food when prompted.

**CRISP**

For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special crisp plate.

DURATION (min)	RECOMMENDED FOR
3 - 4	Cookies (8 - 10 pieces)
7 - 8	Frozen pizza (350 g)
7 - 9	Sponge cake (500 g)
8 - 10	Fish fingers (8 pieces)
9 - 10	Pizza (350 g)
10 - 14	French fries (200 g - 300g)
13 - 15	Quiche Lorraine (500 g)

Required accessories: Crisp plate, handle for the crisp plate.

**GRILL**

For browning, grilling and gratins when used alone. We recommend turning the food during cooking. For best results, preheat the grill for 3-5 minutes.

• GRILL + MW

For quickly cooking entrées (even au gratin) using both microwaves and the grill. It is useful for cooking food like lasagne, fish and potato gratins.

POWER	DURATION (min)	RECOMMENDED FOR
500 W	14 - 18	Lasagne (400 - 500 g)
500 W	10 - 14	Fish (600 g)
500 W	40 - 50	Chicken (whole; 1-1.2 kg)
350 W	15 - 18	Fish gratin (600 g)
0 W	-	Browning only

Recommended accessories: wire shelf

DAILY USE**SELECT A FUNCTION**

Simply press the button for the function you require to select it.

SET THE LENGTH

After selecting the function you require, use Δ or ∇ to set the length for it to run.

The time can be changed during cooking by pressing Δ or ∇ or by increasing the length for 30 seconds each time by pressing \square .

SET THE POWER OF THE MICROWAVE

Press III as many times as required to select the power level for the microwave.

Please note: You can also change this setting during cooking by pressing III .

DEFROST

Press \times , then use Δ or ∇ to set the weight of the food. During defrosting, the function will pause briefly to allow

you to turn the food. Once the operation is complete, close the door and press \square .

ACTIVATE THE FUNCTION

Once you have applied the settings you require, press \square to activate the function.

Every time the \square button is pressed again, the cooking time will be increased by a further 30 seconds.

You can press O at any time to stop the function that is currently active.

 
JET START

When the oven is switched off, press \square to activate cooking with the microwave function set at full power (750 W) for 30 seconds.


PAUSE

To pause an active function, for example to stir or turn the food, simply open the door.

To start it up again, close the door and press \square .

SAFETY LOCK

 This function is automatically activated to prevent the oven from being switched on accidentally. Open and close the door, then press \square to start the function.

SET THE TIME OF THE DAY

Press O until the two digits for the hour (on the left) starting flashing.

Use Δ or ∇ to set the correct hour and press \square to confirm: The minutes will flash on the display. Use Δ or ∇ to set the minutes and press \square to confirm.

Please note: You may need to set the time again following lengthy power outages.

MINUTEMINDER

When the oven is switched off, the display can be used as a minuteminder. To activate the function and set the length of time you require, use Δ or ∇ . Press III to set the power to 0 W, then press \square to activate the countdown.

Please note: The timer does not activate any of the cooking cycles. To stop the timer at any time, press O .

CLEANING

Make sure that the appliance has cooled down before carrying out any maintenance or cleaning. Never use steam cleaning equipment.

Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.

INTERIOR AND EXTERIOR SURFACES

 
- Clean the surfaces with a damp microfibre cloth. If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Clean the glass in the door with a suitable liquid detergent.
- At regular intervals, or in case of spills, remove the turntable and its support to clean the bottom of the

oven, removing all food residue.


ACCESSORIES

All accessories are dishwasher safe with the exception of the crisp plate. The crisp plate should be cleaned using water and a mild detergent. For stubborn dirt, rub gently with a cloth. Always leave the crisp plate to cool down before cleaning.

FILTER CLEANING

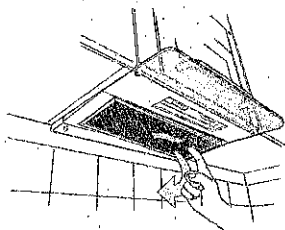

 Clean the grease filter regularly with hot soapy water: Remove the grease filter by pulling the handle down to release the filter from its mounted position.

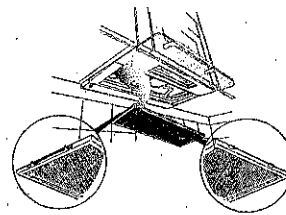

Remount the grease filter in the reverse order after it has been cleaned.

TROUBLESHOOTING

Problem	Possible cause	Solution
The oven is not working.	Power cut. Disconnection from the mains.	Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists.
The display shows the letter "F" followed by a number.	Software fault.	Contact your nearest Client After-sales Service Centre and state the number following the letter "F".

PRODUCT FICHE

The product fiche with energy data of this appliance can be downloaded from Bauknecht website docs.bauknecht.eu

HOW TO OBTAIN THE USE AND CARE GUIDE

 
> Download the Use and Care Guide from our website docs.bauknecht.eu (you can use this QR Code), specifying the product's commercial code.



> Alternatively, contact our Client After-sales Service.

CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual. When contacting our Client After-sales Service, please state the codes provided on your product's identification plate.

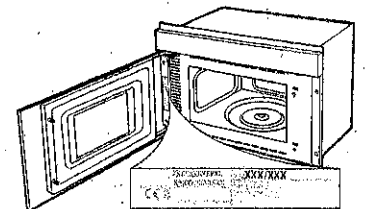

400011309851

Printed In Italy