

DAILY REFERENCE GUIDE




THANK YOU FOR BUYING A BAUKNECHT PRODUCT

In order to receive a more complete assistance, please register your product on www.bauknecht.eu/register




Before using the appliance carefully read the Safety instructions.

PRODUCT DESCRIPTION

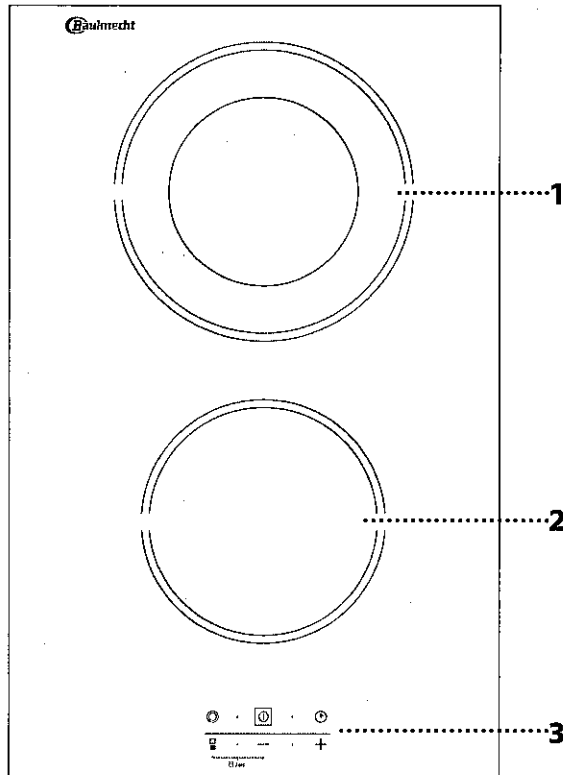

1. **DOUBLE RADIANT COOKING ZONE**
Double circuit (180 - 120 mm)
2. **RADIANT COOKING ZONE**
(145 mm)
3. **CONTROL PANEL**
All operations can be performed using the touch keys (capacitive sensors). Each activity is confirmed by an acoustic signal.

CONTROL PANEL DESCRIPTION

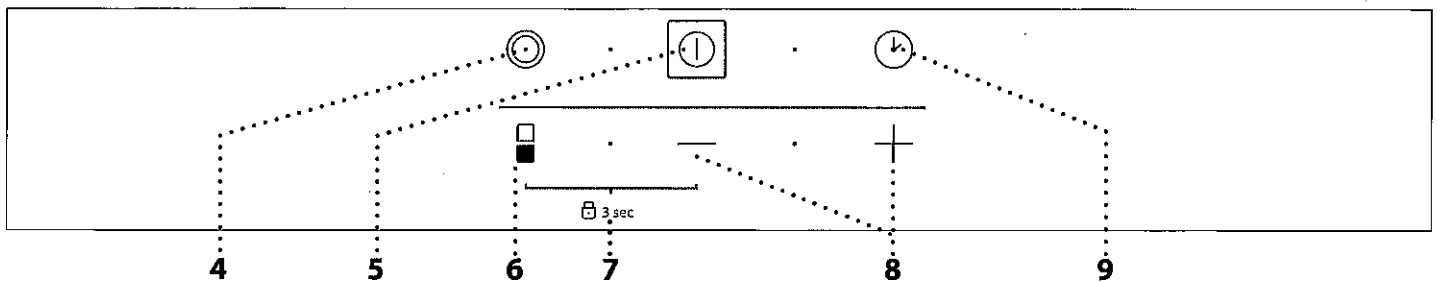


4. **Double cooking zone selection**
5. **ON / OFF button**
to switch on or off the appliance
6. **Cooking zone selection**

7. **Key lock**
keep pressed 3" long to lock the control panel

8. **Heat setting increase and decrease** repeated press to reach the desired level
9. **Timer selection**
to set the cooking time by pressing + and - (8)

DAILY USE

SWITCHING ON THE DEVICE

Press the key  to activate the control: the adjustment level indicators show "0" and a power-on LED appears above the first key.

Perform the next operation within 10 seconds, otherwise the device will switch off automatically.

SET POWER AND TIMER

Use the "+" and "-" keys to adjust the setting of the plates and the required time on timer/minute counter.

The "+" and "-" controls are common to both functions. Accordingly, to regulate the power of the hob, first select the zone with key (4, 6), then adjust the relative power level using the "+" and "-" keys; once done, select the timer function and proceed to set the duration, likewise using the "+" or "-" keys.

SWITCHING ON THE COOKING AREA

Once the device has been activated, switch on the cooking area (within 10 seconds) as follows:

- Press one of the keys to select the cooking area required. The related display gets brighter.
- Use the "+" and "-" keys to adjust the heating level (from 1 to 9-P).

Pressing button "+" when level 9 is reached, the "Booster" function is activated and the letter "P" appears on the display.

- Press and hold down these keys to increase or decrease the setting.

SWITCHING OFF THE COOKING AREA

The requested cooking zone must be activated and will, therefore, be brighter.

Return the setting to "0", by means of the key "-".

RAPID SHUTDOWN OF THE COOKING AREA

- Select the cooking zone to turn off.
- Press and hold "-" and "+" at the same time.

DOUBLE RADIANT COOKING ZONE

On a double cooking zone, one zone or both (central crown/extended-crown) can be switched on.

» TURNING ON A DOUBLE ZONE

After selecting the power level, greater or equal to 1, the double circuit areas are enabled by pressing the cooking zone key again.

Only for this type of heating plate, horizontal dashes light up to indicate how many circuits are turned on.

Two horizontal dashes indicate that all the two resistors are turned on in the selected heating element.

» TURNING OFF A DOUBLE ZONE

The requested cooking zone must be activated and will, therefore, be brighter.

When you touch again the selection key, one circuit at a time is turned off.


If you continue to press the selection key intermittently, the plates are turned on and off.

RESIDUAL HEAT INDICATOR ("H")

If the temperature of the cooking area is still high (and a burn risk is still present) after it has been switched off, the display related to the zone will indicate the letter "H" (residual heat).

The letter H will only disappear when the burn risk is no longer present (approximately 60°C).

SWITCHING OFF THE HOB

The hob can be switched off at any time by pressing the ON / OFF icon ().

LOCK THE CONTROL PANEL (COMBINATION KEY)

The hob can be locked with a combination of keys. Turn on the cooking surface and then press key "-"; holding it down, press the select key on the left: L's appears.

The purpose of this lock is to prevent unintended operations. While the lock is engaged, all operations of the keys are unabled, with the exception of the OFF key.

To unlock the hob, perform the same operation: turn on the surface, press the minus key and press the selection key to the left. The L's disappears.

TIMER FUNCTION

This function simplifies cooking operations: once the set time on the timer has elapsed, the cooking area is automatically switched off.

» TURNING THE TIMER ON

1. The cooking zone must be activated.
2. Select a power level between 1 and P.
3. Touch the timer key (9): the timer display shows "00" and the cooking zone decimal point is highlighted.
4. Select the cooking time (between 0 to 99 minutes) by means of the "+" and "-" keys (8). The timer function will automatically start within a few seconds and a flashing "t" will appear on the zone with the shortest timer setting.

The decimal point of the cooking zone with timer setting remains highlighted with the shortest timer setting. The timer will start up automatically in a few seconds. Press and hold down the "+" or "-" key to scroll the time setting.

The timer function can be applied to all the cooking zones by selecting them.

» TURNING THE TIMER OFF

When the set time has elapsed, an acoustic signal is emitted for two minutes.

To silence the signal, press any key.

To interrupt the timer, proceed as follows:


1. Press the timer key (5).
2. Press the "-" key to reset the time.

SAFETY SHUTDOWN

In the event that one or more cooking areas is inadvertently left on, the safety system will shut the zones down automatically after a certain time has elapsed. The letter "H" will be displayed below.

IMPORTANT

To avoid a permanent damage the hob: do not use pots with bottoms that are not flat; do not use metal pots with enamelled bottom; do not place hot pots/pans over the control panel.

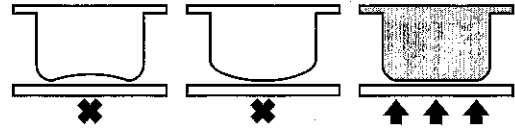**CLEANING AND MAINTENANCE**

- Disconnect the appliance from the power supply.
- Do not use steam cleaning equipment.
- Do not use abrasive sponges or scouring pads as they may damage the glass.
- After each use, clean the hob (when it is cool) to remove any deposits and stains from food residue.
- Use a scraper only if residues are stuck to the hob. Follow the scraper manufacturer's instructions to avoid scratching the glass.
- Sugar or foods with a high sugar content can damage the hob and must be immediately removed.
- Salt, sugar and sand could scratch the glass surface.
- Use a soft cloth, absorbent kitchen paper or a specific hob cleaner (follow the Manufacturer's instructions).
- Spills of liquid in the cooking zones can cause the pots to move or vibrate.
- After cleaning the hob, dry thoroughly.


TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
F0	Electronic error	Disconnect and reconnect the power supply. If the error persists, call after-sales support.
Fc	Electronic control overheated, the cooking zones are switched off.	Wait until the temperature is lowered. The cooking hob will start working again when the temperature returns to normal.
Ft / FE	Electronic temperature sensor may be damaged.	Wait until temperature is lowered. If the message persists even after the value returns to room temperature, call the after-sales support.
Fb	Excessive key sensitivity.	Check that the glass-ceramic work top has been installed properly. Call after-sales support to make sure that keys touch the glass surface correctly.
FU / FJ / FA / FC / Fd	Touchpad error, this error is an automatic keypad check. It will disappear when the automatic check is reset to the correct value.	If the error persists, contact the after-sales support.
Fr	Relay error, there may be a problem with one of the relays.	Disconnect the power supply, wait one minute and switch on again. If the error persists, call after-sales support.

You can download the safety Instructions, User Manual, Product Fiche and Energy data by:



- Visiting our website - docs.bauknecht.eu
- Using QR code
- Alternatively, contact our After-sales Service (see phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

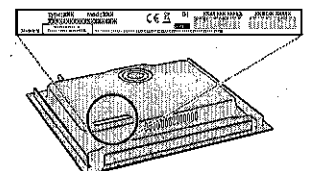

400011357532

Printed in Italy

FR

CONSIGNES DE SÉCURITÉ

IL EST IMPORTANT DE LIRE ET OBSERVER

Avant d'utiliser l'appareil, lire attentivement les consignes de sécurité. Conservez-les à portée pour consultation ultérieure.

Ces instructions et l'appareil lui-même fournissent d'importantes consignes de sécurité qui doivent être respectées à tout moment. Le fabricant décline toute responsabilité en cas de non-respect des présentes consignes de sécurité, pour une utilisation inadaptée de l'appareil ou un réglage incorrect des commandes.

⚠ **AVERTISSEMENT** : L'appareil et ses pièces accessibles deviennent chauds pendant l'utilisation. Veiller à ne pas toucher les éléments chauffants. Les enfants de moins de 8 ans doivent rester éloignés sauf s'ils sont surveillés en continu.

⚠ **AVERTISSEMENT** : Ne pas utiliser la table de cuisson si la surface est cassée ou fissurée - risque de choc électrique.

⚠ **AVERTISSEMENT** : Risque d'incendie : Ne rangez aucun objet sur les surfaces de cuisson.

⚠ **MISE EN GARDE** : La cuisson doit être supervisée. Une cuisson de courte durée doit être supervisée en tout temps.

⚠ **MISE EN GARDE** : Une cuisson sans surveillance sur une table de cuisson contenant de la graisse ou de l'huile peut s'avérer dangereuse - risque d'incendie. N'essayez JAMAIS d'éteindre un feu avec de l'eau, mais éteignez l'appareil puis couvrez les flammes à l'aide d'un couvercle par ex. ou d'une couverture antifeu.

⚠ N'utilisez pas la table de cuisson comme surface de travail ou support.

Gardez les vêtements et autres matières inflammables loin de l'appareil jusqu'à ce que toutes les composantes soient complètement refroidies - un incendie pourrait se déclarer.

⚠ Les enfants en bas âge (0-3 ans) doivent être tenus à l'écart de l'appareil. Les jeunes enfants (3-8 ans) doivent rester éloignés de l'appareil sauf s'ils sont surveillés en continu. Les enfants à partir de 8 ans et les personnes présentant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances peuvent utiliser cet appareil uniquement s'ils sont surveillés ou ont reçu des instructions sur l'utilisation en toute sécurité et s'ils comprennent les risques impliqués. Les enfants ne doivent pas jouer avec l'appareil. Le nettoyage et l'entretien par l'utilisateur ne doivent pas être réalisés par des enfants sans surveillance.

UTILISATION AUTORISÉE

⚠ **MISE EN GARDE** : L'appareil n'est pas destiné à être actionné par le biais d'un dispositif de commutation externe, comme une minuterie, ou un système de télécommande séparé.

⚠ Cet appareil est destiné à un usage domestique et peut aussi être utilisé dans les endroits suivants : cuisines pour le personnel dans les magasins, bureaux et autres environnements de travail ; dans les fermes ; par des clients dans des hôtels, motels, bed & breakfast et autres environnements résidentiels.

⚠ Aucune autre utilisation n'est autorisée (p. ex. pour chauffer des pièces). ⚠ Cet appareil n'est pas conçu pour un usage professionnel. N'utilisez pas l'appareil en extérieur.

INSTALLATION

⚠ Deux personnes minimum sont nécessaires pour déplacer et installer l'appareil - risque de blessure. Utilisez des gants de protection pour le déballage et l'installation de l'appareil - vous risquez de vous couper.

⚠ L'installation, y compris l'alimentation en eau (éventuelle), les raccordements électriques et les réparations doivent être réalisés par un technicien qualifié. Ne pas réparer ou remplacer de parties de l'appareil sauf si cela est spécifiquement indiqué dans le manuel de l'utilisateur. Maintenir les enfants éloignés du site d'installation. Après avoir déballé l'appareil, assurez-vous qu'il n'a pas été endommagé pendant le transport. En cas de problèmes, contactez le distributeur ou votre service après-vente le plus proche. Une fois installé, les déchets de l'emballage (plastiques, pièces en polystyrène, etc) doivent être stockés hors de portée des enfants - risque d'étouffement. L'appareil doit être débranché de l'alimentation électrique avant toute opération d'installation - risque de choc électrique.

Pendant l'installation, assurez-vous que l'appareil n'endommage pas le câble électrique - risque d'incendie ou de choc électrique. Allumez l'appareil uniquement lorsque l'installation est terminée.

⚠ Découpez le contour du meuble avant d'y insérer l'appareil, et enlevez soigneusement les copeaux et la sciure de bois.

⚠ Si l'appareil n'est pas installé au-dessus d'un four, un panneau séparateur (non compris) doit être installé dans le compartiment sous l'appareil.

AVERTISSEMENTS ÉLECTRIQUES

⚠ Il doit être possible de débrancher l'appareil de l'alimentation électrique en retirant la fiche de la prise de courant si elle est accessible, ou à l'aide d'un interrupteur multipolaire en amont de la